

# DEADLOCK LATCH & DOUBLE THROW



- Weldable lock with handle and a double throw deadbolt that moves 24mm into the gate post
- Available in different widths to suit gate thickness
- No need to disassemble for left or right hand gates - simply remove lock from outer case, lift latch retaining spring, remove latch and reinstall as required

## PRODUCT DETAILS

Product code:

Description:

 
<b>05S30</b>	<b>Weld In Lock 30mm Case Width</b>
<b>05S30KA</b>	<b>Weld In Lock 30mm Case Width Keyed Alike</b>
<b>05S40</b>	<b>Weld In Lock 40mm Case Width</b>
<b>05S40KA</b>	<b>Weld In Lock 40mm Case Width Keyed Alike</b>
<b>05S50</b>	<b>Weld In Lock 50mm Case Width</b>
<b>05S50KA</b>	<b>Weld In Lock 50mm Case Width Keyed Alike</b>
<b>05S60</b>	<b>Weld In Lock 60mm Case Width</b>
<b>05S60KA</b>	<b>Weld In Lock 60mm Case Width Keyed Alike</b>

Material: Mild steel case.  
Keyed alike option available.  
Suitable for left and right handed gates.



## INSTALLATION

1. Weld the outer lockcase into the gate and galvanise or paint as part of the gate.
2. Fit the lock into the lockcase and secure using 4 countersunk screws and the euro cylinder.
3. Drill clearance hole in keep or outer frame to receive the latchbolt. Slot this hole vertically to allow for gate sag.
4. Ensure latchbolt moves freely without binding on the gate or frame.
5. **MAINTENANCE** Annually remove the lock from the lockcase and lightly oil all moving parts.

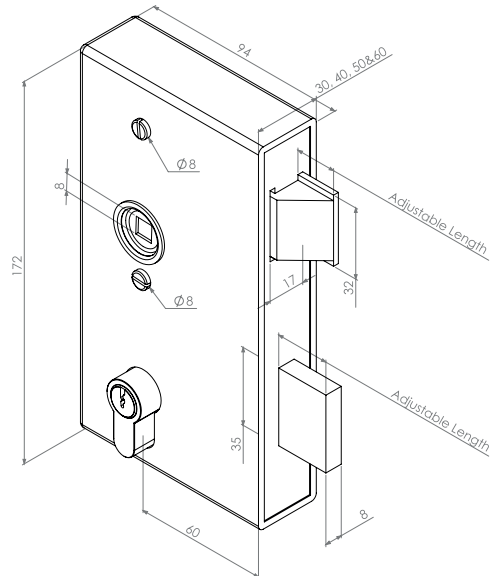

Whilst every effort has been made to ensure the accuracy of the information supplied, F.H. Brundle cannot be held responsible for any errors or omissions. This product must only be employed for its original intended use. Any other use is wrong and potentially dangerous. Installation must be carried out in full compliance with current regulations. F.H. Brundle cannot be held liable for any damages resulting from wrongful, erroneous or negligent use.