

# BOLT-ON QUICK ACTION EXIT KEY LOCK



- The quick exit push pad is designed to facilitate rapid exit through gates
- Stainless steel adjustable latchbolt which springs 22mm ( $\frac{7}{8}$ ") into the gate post. Precise fitting on site
- Supplied with bolt guide plate and gate post strike plate
- Quick exit with key access
- A security shroud is also available to prevent access to the push pad from the outside

## PRODUCT DETAILS

Product code:	Description:
<b>05SBQEKL01</b>	<b>Bolt-On Quick Action Exit Key Lock Right Hand for 10 - 30mm Gate Frames</b>
<b>05SBQEKL02</b>	<b>Bolt-On Quick Action Exit Key Lock Right Hand for 40 - 60mm Gate Frames</b>
<b>05SBQEKLL01</b>	<b>Bolt-On Quick Action Exit Key Lock Left Hand for 10 - 30mm Gate Frames</b>
<b>05SBQEKLL02</b>	<b>Bolt-On Quick Action Exit Key Lock Left Hand for 40 - 60mm Gate Frames</b>
Marine grade:	Salt spray tested for 1000 hours.
Latchbolts:	Adjustable, latchbolt springs 22mm ( $\frac{7}{8}$ ").

 
## INSTALLATION

1. Drill 2 x 9mm ( $\frac{3}{8}$ ") diameter holes at 92mm ( $3\frac{5}{8}$ ") centres for M8 fixing bolt.
2. Drill 18mm ( $\frac{3}{4}$ ") clearance hole for latchbolt at 22mm ( $\frac{7}{8}$ ") centres down from the top 9mm hole.
3. Fix lock in place using stainless steel clamp plate, bolt support plate and 2 stainless steel countersunk fixing bolts supplied.
4. Drill clearance hole in keep or outer frame to receive the latchbolt. Slot this hole vertically to allow for gate sag. Fit strike plate by either welding or screw fixing to the gate post.
5. Ensure latchbolt moves freely without binding on gate or frame.
6. **MAINTENANCE:** Every two months, lubricate the latchbolt with light oil. Annually, dismantle lock and spray the mechanism inside with light oil.


## 3 MONTHLY MAINTENANCE

1. Remove keypads from the lock.
2. Spray the inside of the lock thoroughly with WD40 or equivalent, through the tumbler holes at the back of the lock.
3. Spray all the fixing accessories and the latch with WD40 or equivalent. Push each of the buttons and rotate the knob several times to make sure the lock is working smoothly.

Whilst every effort has been made to ensure the accuracy of the information supplied, F.H. Brundle cannot be held responsible for any errors or omissions. This product must only be employed for its original intended use. Any other use is wrong and potentially dangerous. Installation must be carried out in full compliance with current regulations. F.H. Brundle cannot be held liable for any damages resulting from wrongful, erroneous or negligent use.

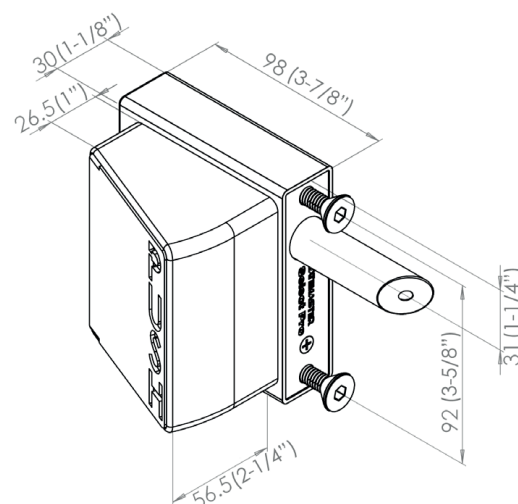

### L.H. Lock

 

### R.H. Lock



**F.H. BRUNDLE**  
SERVING THE TRADE SINCE 1889

Tel. 01708 25 35 45

sales@brundle.com

www.fhbrundle.co.uk

Mar 2023

**KEYPAD ON BOTH SIDES**

Whilst every effort has been made to ensure the accuracy of the information supplied. F.H. Brundle cannot be held responsible for any errors or omissions. This product must only be employed for its original intended use. Any other use is wrong and potentially dangerous. Installation must be carried out in full compliance with current regulations. F.H. Brundle cannot be held liable for any damages resulting from wrongful, erroneous or negligent use.

