



# TUBE CLAMPS



## Tube Clamps Application Guide




Wall and base flange with through top

Enables Tubes to be joined

Start and End Section


90 degree corner

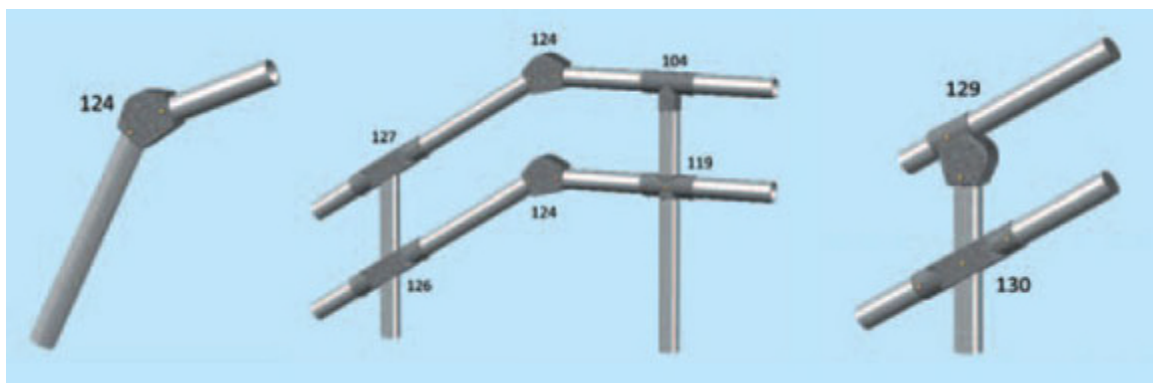

Adjustable 15 to 60 degrees

**124** - 15 to 60 degrees from horizontal

**129** - Adjustable 30 to 60 degrees  
**130** - Adjustable 30 to 45 degrees

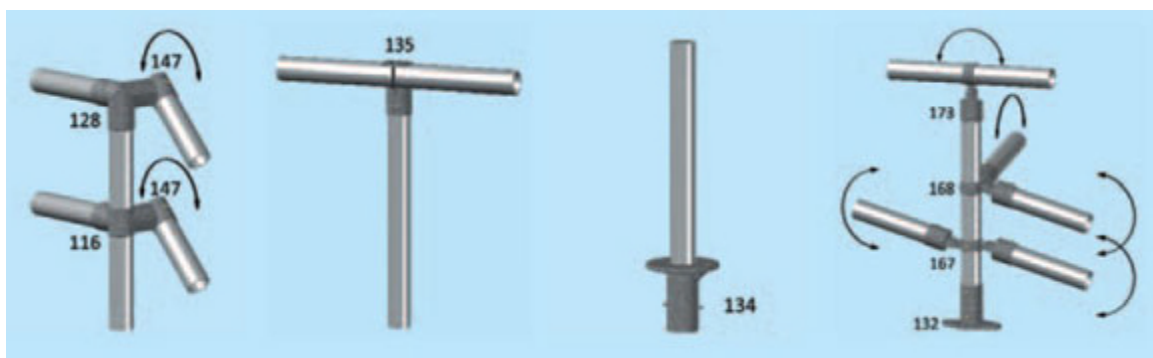

From Slope to Level Rail using **147**

Allows fixing to existing rail

Ground Socket for Removable Tubes

Riveted Swivel

