



SIDE MOUNTING INSTRUCTIONS




1. Set a string line to enable threaded rods to be drilled and set into the wall to ensure that the top rods are in alignment (level).

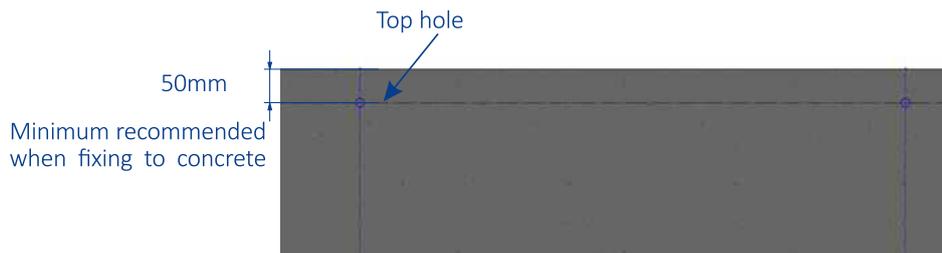

2. Work out the spacing required for top mounts and mark the top holes and using a level mark the bottom holes which are 75mm apart. The threaded rods should be chemset and protrude from the wall between 14mm and 18mm to ensure that the special nuts provide will fully engage.

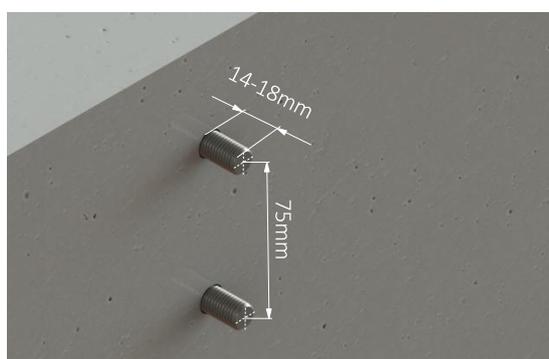


3. The bottom of the glass will be 86mm below the centre of the top threaded rod and when installed the distance from the wall to the glass should be 42mm.

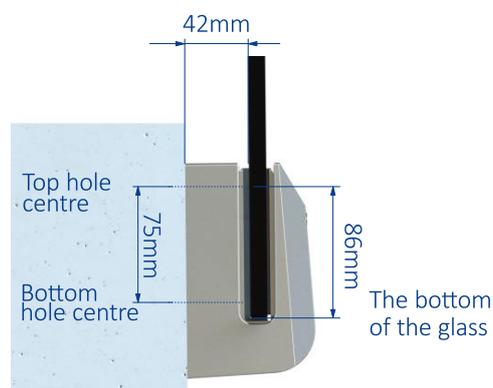

4. When the rods are cured, fit the glass mounts over the rods and using the nut supplied wind tighten by hand initially, or using a shortened Allen key provided tighten as far as possible, then using our special socket (to be ordered separately) tighten nut securely.

1) Fit the glass mounts over the rods

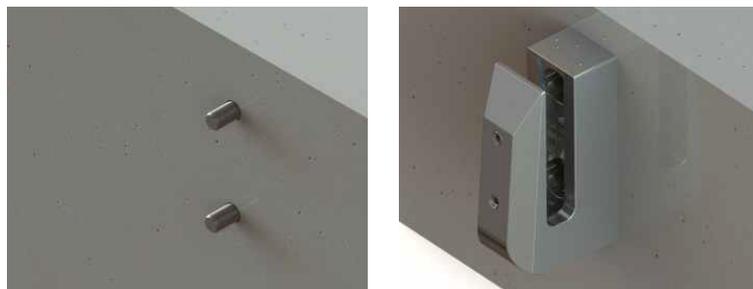

2) Tighten nut

Wind special nuts provided onto threads by hand initially. When hand tight use an Allen key (cut down) to wind the nuts on further until there is sufficient room to allow the special socket available from your supplier to fit inside the glass mount.



3) Tighten nut completely

Use a suitable spanner or shifter to tighten completely.



5. Select the correct plastic for the glass thickness to be used. For more adjustment, use plastics for a thicker glass and use spare plastics to shim across.

1) Install the press plate & plastic




2) Set up glass




3) Tightening and adjustment

Tightening

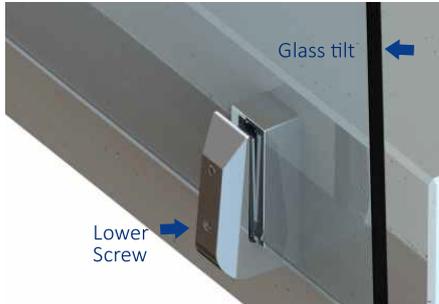

Adjustment

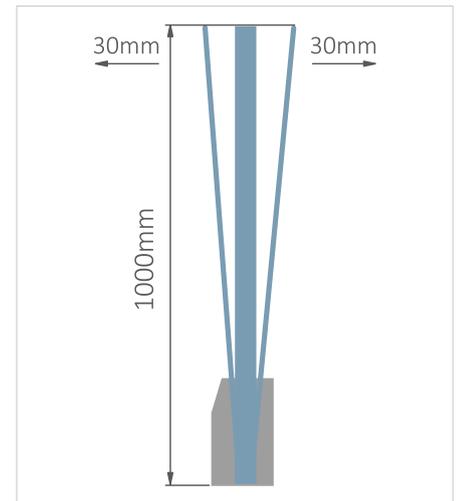

Whilst every effort has been made to ensure the accuracy of the information supplied. F.H.Brundle cannot be held responsible for any errors or omissions. This product must only be employed for its original intended use. Any other use is wrong and potentially dangerous. Installation must be carried out in full compliance with current regulations. F.H.Brundle cannot be held liable for any damages resulting from wrongful, erroneous or negligent use.

Southampton

Tel: 023 8070 3333
Fax: 023 8070 5555

Rainham

Tel: 01708 25 35 45
Fax: 01708 25 35 50

Ilkeston

Tel: 0115 930 2070
Fax: 0115 951 2455

Birmingham

Tel: 0121 565 8282
Fax: 0121 565 8292

Haydock

Tel: 01942 86 88 88
Fax: 01942 86 88 99

Edinburgh

Tel: 0131 335 5999
Fax: 0131 335 5911

Glasgow

Tel: 0141 332 3231
Fax: 0141 332 7325



F.H. BRUNDLE
SERVING THE TRADE SINCE 1889

www.fhbrundle.co.uk
sales@brundle.com