




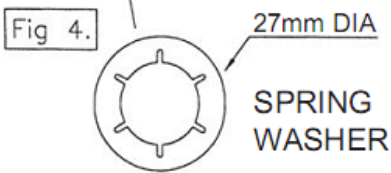

RAPTOR

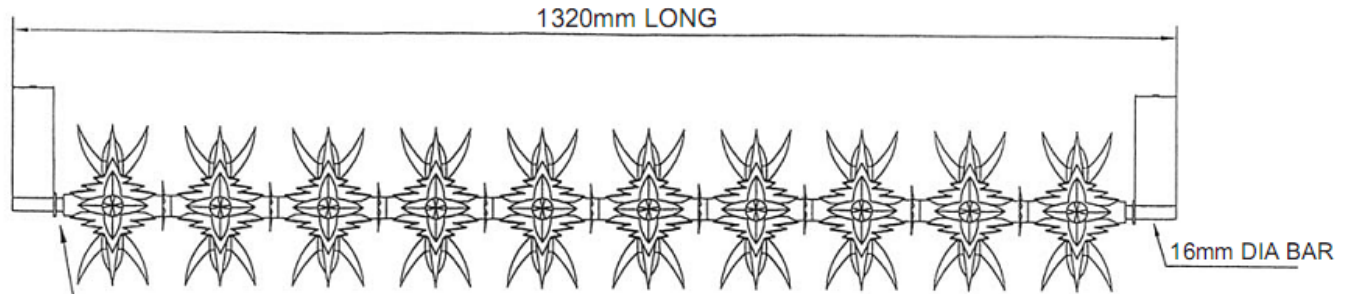


1. Attach Top Arm Bracket to Angle Fixing Bracket as shown in Fig 2
2. Install Angle Fixing Brackets at 1270mm Centres
3. Take Pre-Assembled Raptor Spindles and fix to Top Arm 'U' Shackle as shown in Fig 3 and tighten 'U' Shackle Nuts
4. If short runs are required or 'U' Shackles need to be positioned between Raptor Units, you must ensure that the Spring Washer Fig 4 is positioned on the end of the Spindle

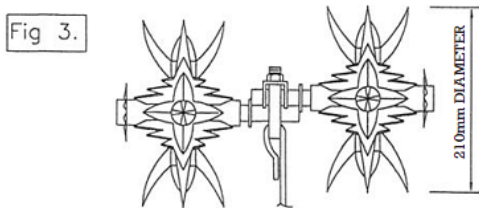

Connection of overlapped spindle ends to bracket

Note: For maximum security it is recommended that the Top Arm and the Angle Fixing Bracket should be tack welded together after positioning

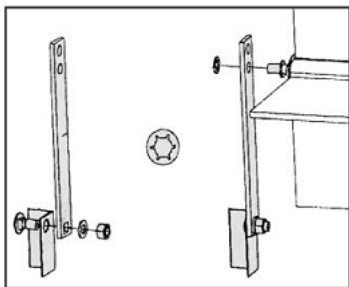

Note: New Bracket system

HOW TO ORDER

PLEASE STATE METRE RUN WHEN ORDERING

Divide Length of run by 1.270 Metres

This will give you the number of Lengths you will need **Code: 490001**

Number of Lengths plus 1 = Number of Standard Brackets

Number of Top Pivots

Number of Brackets X 2 = Number of Through Bolts **Code: 16248**

PARTS

1320mm Assembled Length **Code: 490001**

Standard Brackets **Code: 4902256**

Top Pivot **Code: 490002**

M8 Through Bolts **Code: 16248**

SOUTH & WEST
502 Millbrook Road,
Third Avenue, Millbrook,
Southampton,
SO15 0JX
Tel: 023 8070 3333
Fax: 023 8070 5555

NORTH WEST
Haydock Lane,
Haydock Industrial Park,
St. Helens,
WA11 9XE
Tel: 01942 86 88 88
Fax: 01942 86 88 99

LONDON & SOUTH EAST
Lamson Road,
Ferry Lane North,
Rainham, Essex,
RM13 9YY
Tel: 01708 25 35 45
Fax: 01708 25 35 50

WEST MIDLANDS
Unit 6, Dorset Road,
Saltley Business Park,
Saltley, Birmingham,
B8 1BG
Tel: 0121 327 8999
Fax: 0121 327 85555

EAST MIDLAND & NORTH
Condor Road,
Quarry Hill Ind. Estate,
Ilkeston,
DE7 4RE
Tel: 0115 930 2070
Fax: 0115 951 2455

SCOTLAND
37 St. Clair Street,
Edinburgh,
Scotland,
EH6 8LB
Tel: 0131 656 7400
Fax: 0131 656 7499