ADJUSTABLE GAS GATE CLOSER



- Top quality gate closing strut, ideal for closing gates up to 80kg (175lb)
- Closing force can be adjusted by using the unique adjustable brackets
- No need to release gas, simply move the strut along the slots in the brackets to adjust the force exerted. The force can be increased again by moving the strut further than the gate hinge
- The adjustable brackets also make the installation easy as there is no need to compress the spring when fitting it to the gate



PRODUCT DETAILS

Product code: Description:

05GC03B Weld Fix Gas Gate Closer

05GC03W Screw Fix Gas Gate Closer

Max gate weight: 80kg (175lb)

Max gate size: 2500mm (8ft 2.43") high x 1200mm

(3ft 11") wide

End fittings: M10 elbow joints

Fitted with steel rod protection tube

Finish: Black

Center to center: 792mm (9-3/16") Stroke length: 240mm (9-29/64")


Force: 300N




INSTALLATION

- Fix the brackets supplied in position relative to the centre of the hinge as shown. WARNING! Do not weld the brackets with closer fitted, this could damage the seals.
- Close the gate and secure the strut to the slotted bracket and the long bracket using the shakeproof washers and nuts provided. Washer positions are as shown. To increase or decrease the force exerted on the gate, reposition the strut on the long bracket as required.
- 3. IMPORTANT: if the gate can be opened more than 90° there is potential for the strut to be damaged. We recommend fitting a stop to prevent this.

MAINTENANCE: The piston rod is protected by a steel cover tube. The piston rod should not be lubricated or damaged in any way, as this will reduce the life of the seals. Periodically lubricate the ball joints with a light oil and clean the surface of the gas strut with a damp cloth.

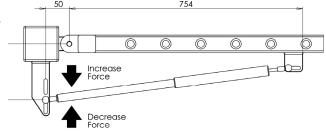

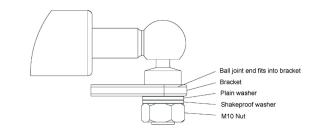

Whilst every effort has been made to ensure the accuracy of the information supplied. F.H. Brundle cannot be held responsible for any errors or omissions. This product must only be employed for its original intended use. Any other use is wrong and potentially dangerous. Installation must be carried out in full compliance with current regulations. F.H. Brundle cannot be held liable for any damages resulting from wrongful, erroneous or negligent use.

Tel. 01708 25 35 45

